

Overview:

UrSOSButton™ is a lightweight and discreet personal alarm. Its design makes it easy to summon help in an emergency. It links to any Android smartphone, sending text messages and phone call alerts to your family, friends and colleagues.

Smartphones are changing lives but in an emergency they're difficult, cumbersome and sometimes inaccessible. UrSOSButton™ bypasses these flaws, returning control to you when you most need it.

Main Points

- Dedicated physical SOS button for Android Smartphones
- Activate an SOS Alert even when the screen is locked
- Works in conjunction with any Android Smartphone
- Provides the ability to raise an alarm easily
- Enables a fast response to SOS and Man Down alarms
- Discreet device with up to 12 months or more from a single charge
- Vibration feedback and LED status indicator



Bluetooth Pairing with an Android Smartphone

UrSOSButton for Business requires that the Business (VitlLink SOS) companion app and Widget be installed and ALWAYS running on your Android smartphone.

Business App and Widget Download


https://play.google.com/store/search?q=Vitllink%20SOS&c=apps


Before attempting to pair UrSOSButton with a phone please charge the battery in UrSOSButton for 1 hour, make sure the companion app is installed, configured for use with UrSOSButton and "Lone Working" is enabled. We recommend that you restart your phone after installing the app or starting the pairing procedure.


- 1. Charge the battery in UrSOSButton for 1 hour using a standard micro USB charger. Your Android smartphone charger is normally suitable
- 2. To enter pairing mode, connect a charger to UrSOSButton and press and hold button 2 (closest button to charger socket) for 4 seconds. UrSOSButton will give a short vibration each second while the button is pressed and a long vibration when it has been pressed for long enough. If you don't have a charger available, press and hold <u>both</u> buttons for 16 seconds. UrSOSButton will vibrate each second and the LED will flash blue. After 16 seconds there is a long (1 second) vibration and the buttons should be released.
- 3. Within 30 seconds the LED will flash blue twice every second and continue flashing during the pairing process.
- 4. From within the Bluetooth settings on your smartphone, scan for devices
- Select UrSOSButton-1234 when it is found and within a few seconds a pairing request with a Passkey will be displayed. Select Pair to complete the pairing
- UrSOSButton LED will flash Green/Blue to indicate a successful pairing. The "Last Checked" section within either companion app will display UrSOSButton battery status and last checked Date and Time.



Once UrSOSButton is paired with your smartphone you shouldn't need to do it again even if you have to reinstall the app. Only in cases where the pairing information has been deleted or lost should you need to repair the device.

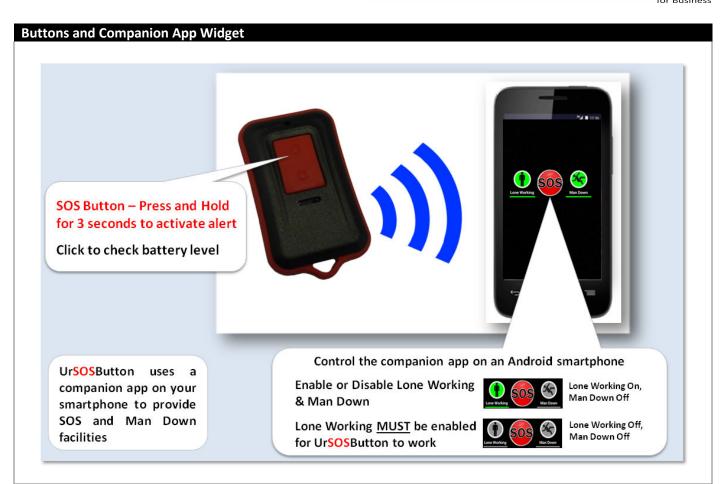

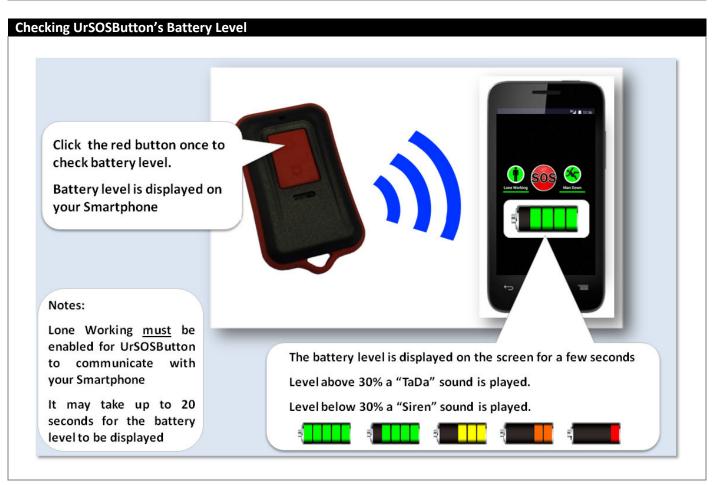

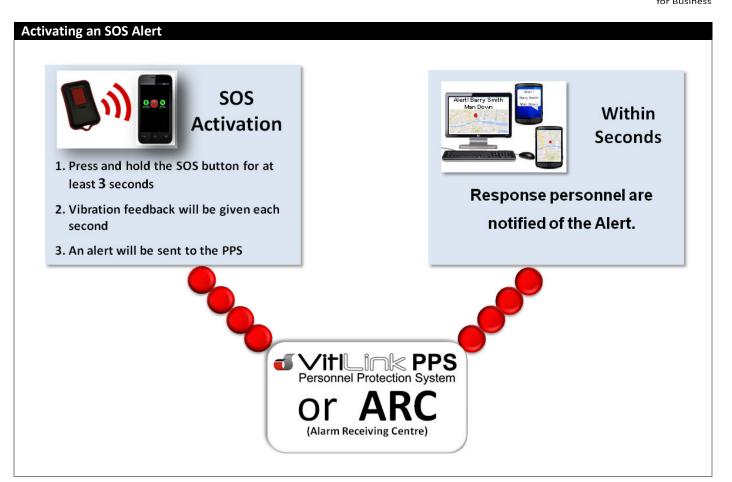

Man Down operation



- When your smartphone is powered on the companion app reverts to the its last operating mode.
- When charging the Man Down sensor is temporarily disabled
- You can disable the Man Down sensor clicking the "Man Down" button on the home screen.

Green = Man Down ON Grey = Man Down OFF

- When the device is in the Man Down position it will beep and vibrate before activation occurs
- Returning the device to the normal position will reset the countdown timer and stop the beeping and vibration
- For best operation you should use a pouch with your smartphone and attached it to your belt



Deactivating an SOS or Man Down Alert



- · It is not possible to stop an alert once it is triggered
- If an alert is activated you <u>must</u> deactivate the alert once the situation is resolved
- · Press the Close Button on your smartphone screen
- The alert will be deactivated and a message will be sent to all responders.
- <u>Do Not</u> leave the device in Alert Mode as this will prevent the SOS and Man Down sensor from operating as an alert is already active.
- It will also cause another alert activation if the phone is restarted.
- When an Alert is active the phone can automatically answer <u>any</u> incoming call and switch to hands free mode.

Operating Notes

It is our recommendation that the following operating procedures be used as a minimum to ensure correct operation of the device and its companion smartphone app.

- Check the battery level of UrSOSButton every day and recharge if necessary
- If voice calls alerts are made then make sure your caller ID is not withheld as the receiving end will not know who is calling.
- If you are using Man Down detection then this should be tested every day by placing the smartphone in the Man Down position and waiting until the warning beeps or vibration is produced.
- Alerts can be delivered by the companion app via SMS, Voice call and/or WiFi/GPRS/3G/4G connection. If no connection is available an alert activation will not be possible. Make sure a signal is available should you need to raise an alarm.
- Use only in conjunction with your organisations Health and Safety procedures





Hardware

From top to bottom:

- 1. RGB LED
- 2. Button 1
- 3. Button 2
- 4. Micro USB socket
- 5. Key ring loop



RGB LED	
Colour cycle : Red, Green, Blue, White	During a normal power on (not SOS) the LED will quickly cycle through the 3 primary colours and then turn on all colours to display a white light. This is performed as a test to confirm the correct operation of the LED Once completed the LED will then display the battery status for 1 second Red = Low Battery (< 30%) Yellow = Medium Battery (30% - 60%) Green = Good Battery (> 60%)
	, ,
Flashing Red/Blue continuously after power on	Device has no pairing information or has never been paired with a phone.
Flash Green after a button press or Flash Green more than 3 seconds after power on	A green indication signals that a connection was made with the paired phone and the button press (SOS) or battery test signal was successfully sent.
Flashing Blue (On 500ms / Off 500ms)	Entering or in Pairing mode. User should search for the UrSOSButton
Flashing Blue/Green (On 500ms / Off 500ms)	Pairing successful and data packet acknowledged by app.
Flashing Blue/Red (On 500ms / Off 500ms)	Pairing may have been unsuccessful or there was a communication error with the companion app.
Charger Connected	When the charger is connected and the device is powered on a battery level indication will be indicated every 3 seconds. Note: Other indications may override this if it conflicts with its timing.
	A green charging battery level indication will be indicated when the battery is >90% charged.
2 Quick Red flashes	1 Second before power off the LED is flashed red twice



Vibration feedback	
Button Click	Each time a button action is performed (Single, Double or Triple) a 100ms vibration is feed back to the user.
Button Long Press	When a button is pressed and held for 1 second or more a 200ms vibration is fed back to the user for each second that the button is held.
	If the user continues to press either button for 3 seconds a long vibration 1000ms will be fed back and a long press indication is transmitted to the app.
	As confirmation of successful delivery of a long press data packet to the app a vibration of 2000ms is fed back to the user
2 Quick vibrations	1 Second before power off 2 vibrations of 100ms in length with a 300ms gap are fed back to the user
Error vibration	A minimum of 3000ms vibration is fed back to the user if UrSOSButton is unable to successfully transmit a data packet within 180 seconds of the button action.
	This error vibration is not given for SOS activations (Long Press) as the device will not stop trying to send this packet until the battery has been depleted.

Note: Vibration feedback is disabled if the battery level goes below 20%. This is done to make as much power as possible available to the Bluetooth core thus increasing its chances of making a connection to the paired smartphone even when the battery is below optimum level.

Micro USB Socket	
Charging	The micro USB socket is used for charging the internal Li-Ion battery.
	It should normally take about 45 minutes to recharge the battery.
	If the battery has been discharged extremely or has been subjected to very low temperatures (-10°C) it may take longer to recharge fully.
	Charging should only be attempted where the ambient temperature is between +5°C and +40°C
Firmware upgrading	The micro USB port is also used for performing firmware updates to the device. If a firmware update is made available a separate document will be available to describe this process.

Basic Power Up/Power Down sequence

When powered on, UrSOSButton will make a connection to the paired phone, transmit the relevant data packet, send a Heartbeat packet every 5 seconds for 15 seconds and then send a Close Bluetooth packet after which UrSOSButton will power off.

If a connection to the phone is not obtained and an SOS has <u>not</u> been activated then UrSOSButton will power off after 180 seconds.

If a connection to the phone is not obtained and an <u>SOS has been activated</u> then UrSOSButton will continue to attempt to obtain a connection until successful or the battery is depleted.



Warranty & Legal

To avoid damaging the UrSOSButton, do not:

- Expose it to extremes of temperature or humidity;
- Subject it to hard knocks or excessive force;
- Immerse it in liquid; or
- Use volatile or corrosive substances when cleaning it, as damage caused in any of these ways is not covered by this warranty.

If you have any difficulty using UrSOSButton, consult the user manual to check you are using it correctly.

If within 12 months of the date of purchase UrSOSButton does not function substantially as described in the user manual because of defective materials or workmanship, Isle Systems will repair it free of charge, subject to the following conditions:

Where the fault is the result of misuse, unusual external effects, accidental damage, normal wear and tear, or unauthorised repair, Isle Systems may charge you for the repair and retain the product until you have paid that charge in full.

You must produce proof of purchase, showing the date of purchase of this product, to have a repair carried out free of charge under this warranty, so please keep your receipt/invoice safely. To have this Isle Systems product repaired under this warranty, either return it personally or send it by registered post, together with your sales receipt, to your Isle Systems supplier/agent or to Isle Systems at the address shown on www.islesystems.com/contactus.html. Please ensure that it is properly and securely packed. Please note that we will not be liable for damage to or loss of the product while it is in transit to Isle Systems or an Isle Systems agent; check that your insurance covers the relevant risks. Service is only available in countries where Isle Expert Systems Limited officially distributes the product.

In the event of Isle Systems being unable to correct or replace the UrSOSButton, Isle Systems liability to you shall not exceed the Isle Systems Suggested Retail Price (SRP) of UrSOSButton. In no event will Isle Systems be liable for direct, indirect, special, incidental or consequential loss of profits or loss of data arising out of use or misuse of UrSOSButton.

By using UrSOSButton and any associated applications you agree that Isle Systems or it agents are not liable under any conditions should this device or associated applications fail to function in any way or for any reason. This device and associated applications are not guaranteed to operate as described in any literature.

If you do not agree with these terms and conditions please return the unused UrSOSButton device and accompanying literature in its original packaging to the place of purchase.